


# Turn the connections with double pumps

Pressure connection P2

Loosen the screws of connection P2

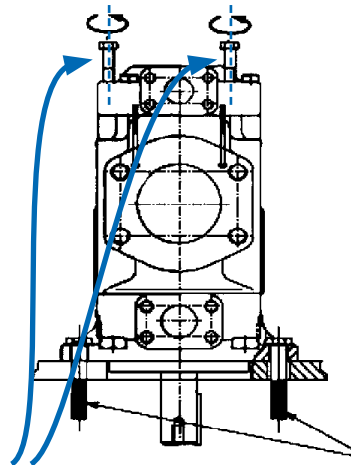


Pump pressure connection P2

Suction connection

Pump pressure connection P1

Pump blockage

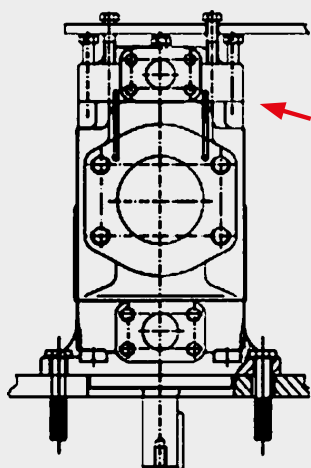


**IMPORTANT!**  
Do not dismantle the housing, only turn it using the screws.

You will otherwise alter the position of the centring pin and compress it when tightening the housing.


**Torque:**

T6CC Port 2 End cap 61 Nm  
T6DC Port 2 End cap 68 Nm

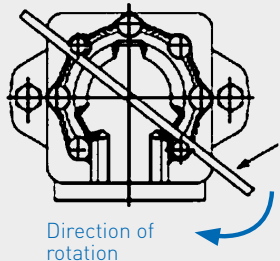


Direction of rotation

Turn with a metal rod

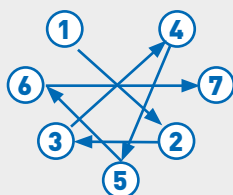


Pressure connection P1

Loosen the 4 screws  
Turn using 2 screws

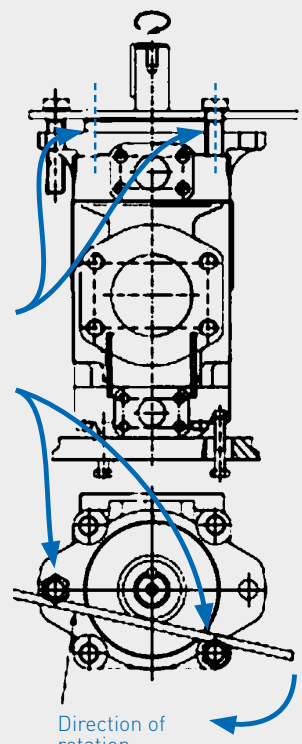

Direction of rotation

Turn with a metal rod

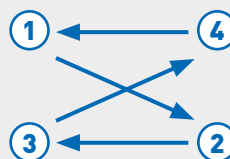

**Torque:**

T6CC Port 1 Installation cap 159 Nm  
T6DC Port 1 Installation cap 187 Nm